

Startrek Biometric Scanner Installation Manual

Table of Contents


1	EXECUTIVE SUMMARY	3
2	STEPS	3

1 Executive Summary

This manual explains the steps to install the Startek Biometric Scanner on Windows based machine.


2 Steps

1. Open Startek folder there will be two folders present in this folder unzip the folder one by one.
2. Unzip the zipped folder
 - a. Right click on the zipped folder and select the option to extract the following folders one by one
 - i. Setup_FM220_Support
 - ii. SetupFM220_RD_Ver1

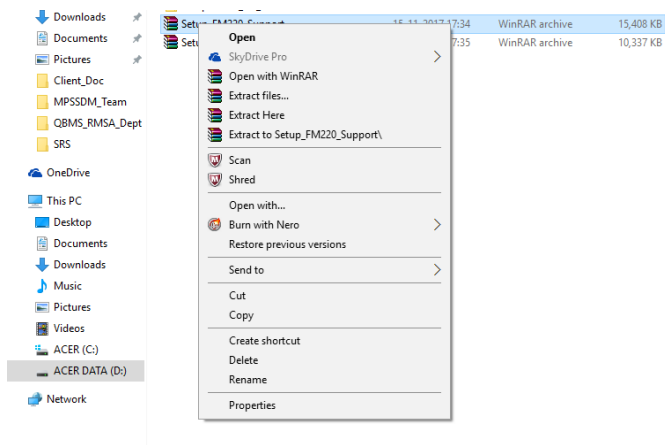


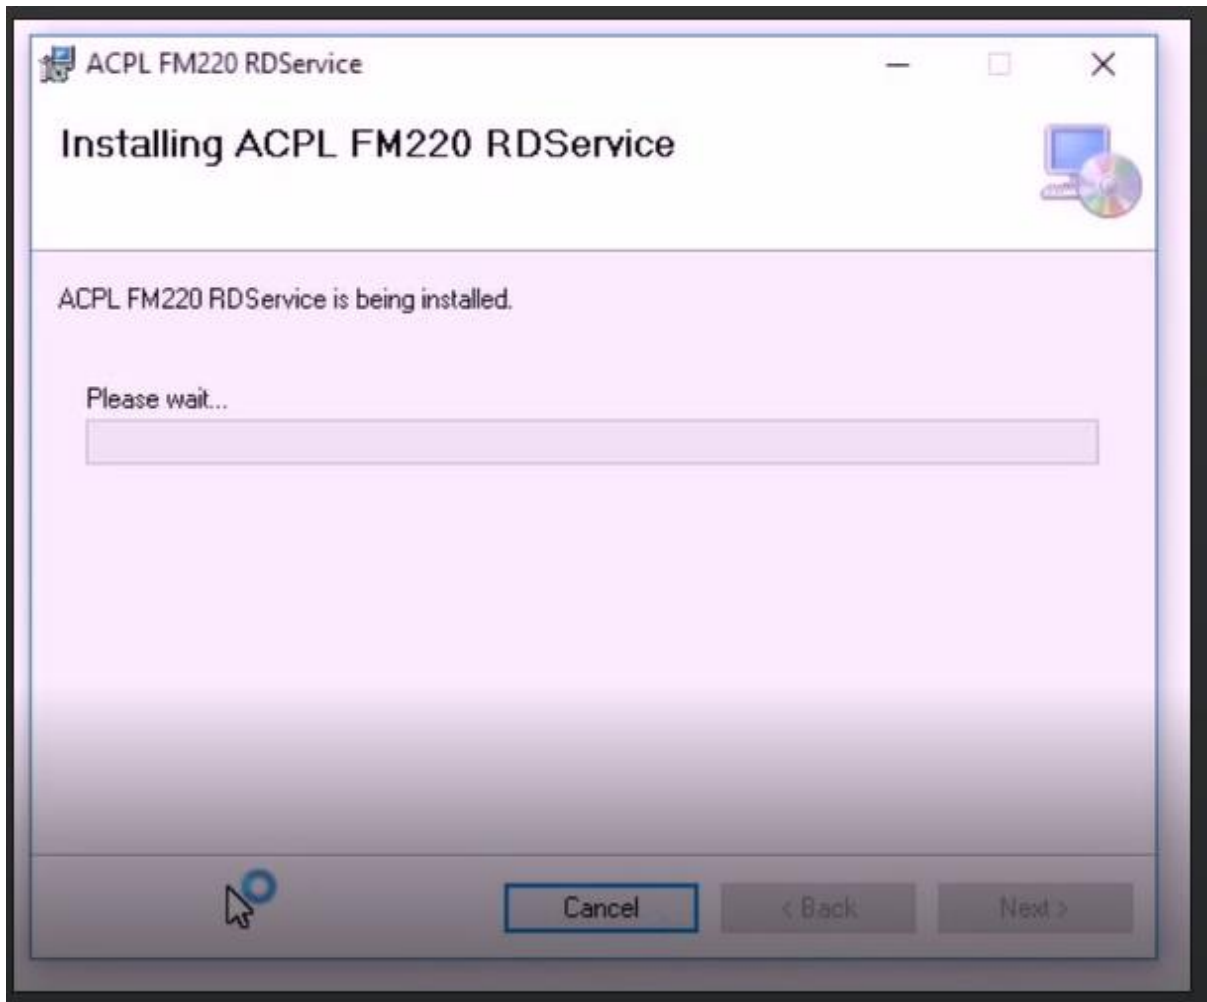
3. Once after extracting the folder open **Setup_FM220_Support** and click on the **Setup_FM220_Support** installer

Name	Date modified	Type	Size
Setup_FM220_Support	15-06-2017 18:32	Windows Installer ...	18,988 KB

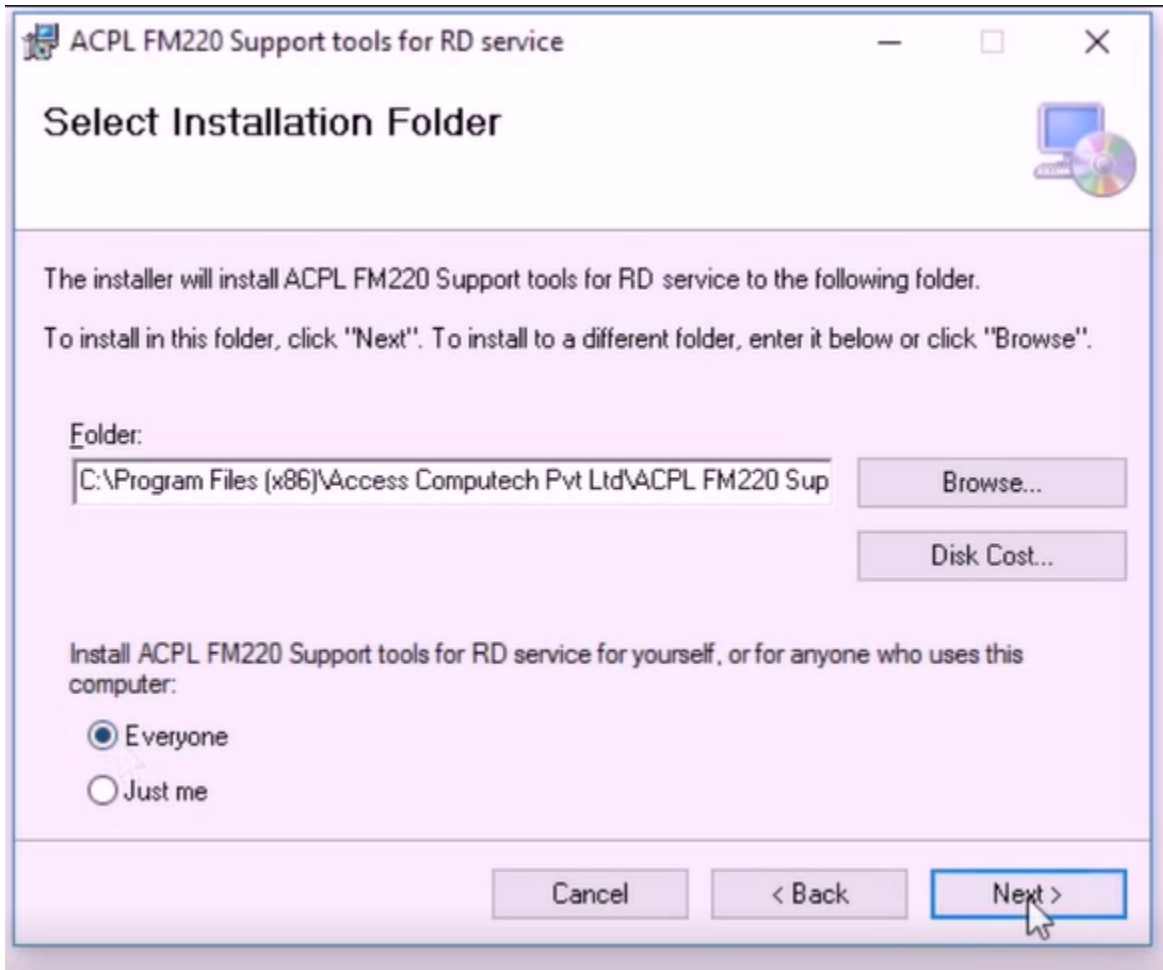


4. Once after completion of the setup , open second folder **SetupFM220_RD_Ver1** and click on the **Setup_FM220_RDservice** installer

Name	Date modified	Type	Size
 Setup_FM220_RDservice	20-06-2017 20:10	Windows Installer ...	11,283 KB



5. Once these setups are installed successfully restart your system.
6. Connect the biometric device on the USB port.
7. From the System tray right click on the ACPL FM220 Registered Device Tool.

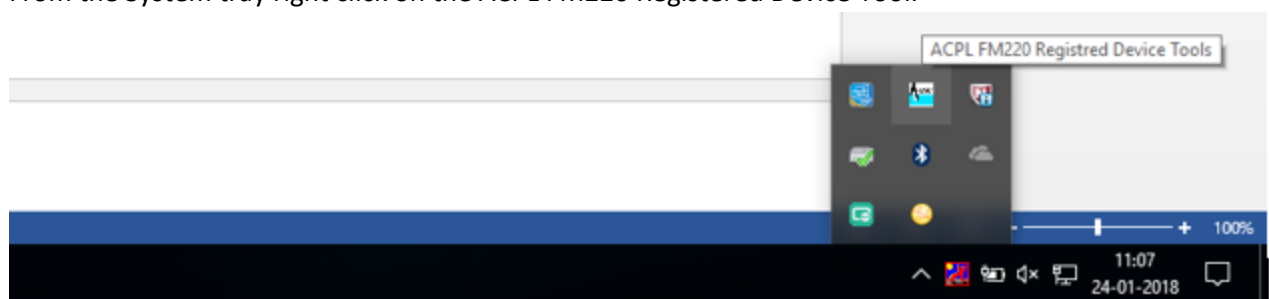


8. Right click on the ACPL FM220 Registered Device Tools and select the option “Test Capture “




9. A small window will be opened on the screen with a note “Place Finger and click capture”, place your finger on the scanner and click on the capture finger button. Scanned finger will be shown in the small screen.




10. For the case when finger is scanned properly it shows a message on the screen “Test Capture Done” this indicates the scanner is properly installed and ready for the use.

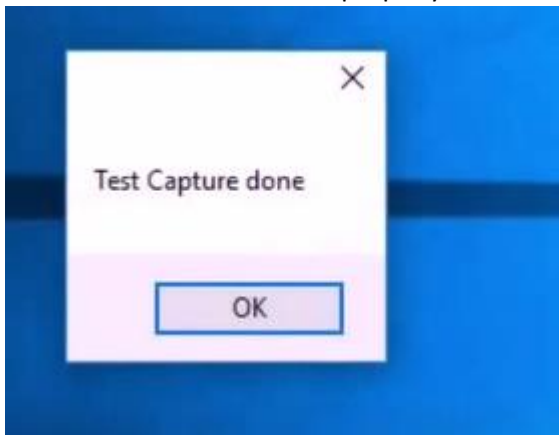

11. For the case if you are unable to open the scan window after clicking on Test Capture option, then select **Restart** option just above the **Test Capture** option and then click on the **Test Capture**.

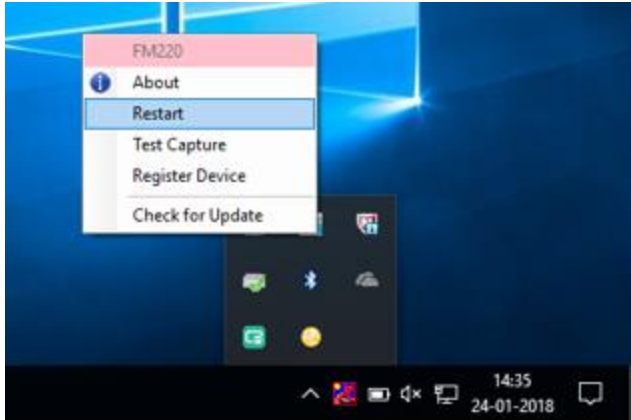



12. Now open <http://ssdm.mp.gov.in/> and select candidate self-registration from the top header

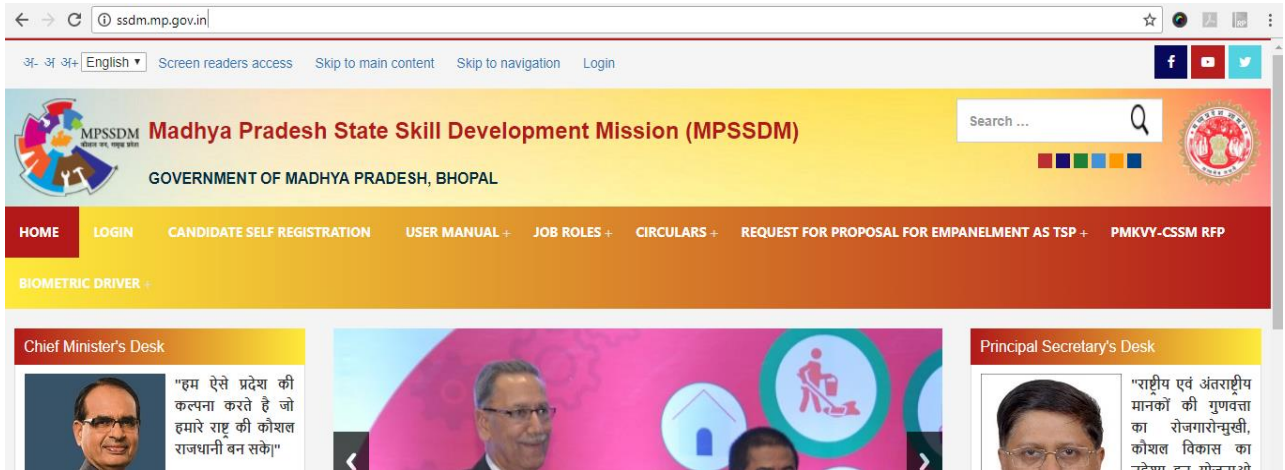

User will be redirected to www.ssdm.mp.gov.in/CandidateReg.aspx on this page enter Aadhar number and select "Aadhar e-KYC(Biometric Capture Finger)" option from the radio button.

13. Now click on the Submit (Biometric –Capture finger) button a small window will be open indicating the user to place their finger on the scanner, as soon as the finger is scanned a pop up on the window will appear on the screen with message “Capture done” with ok button option, user need to click on the ok.

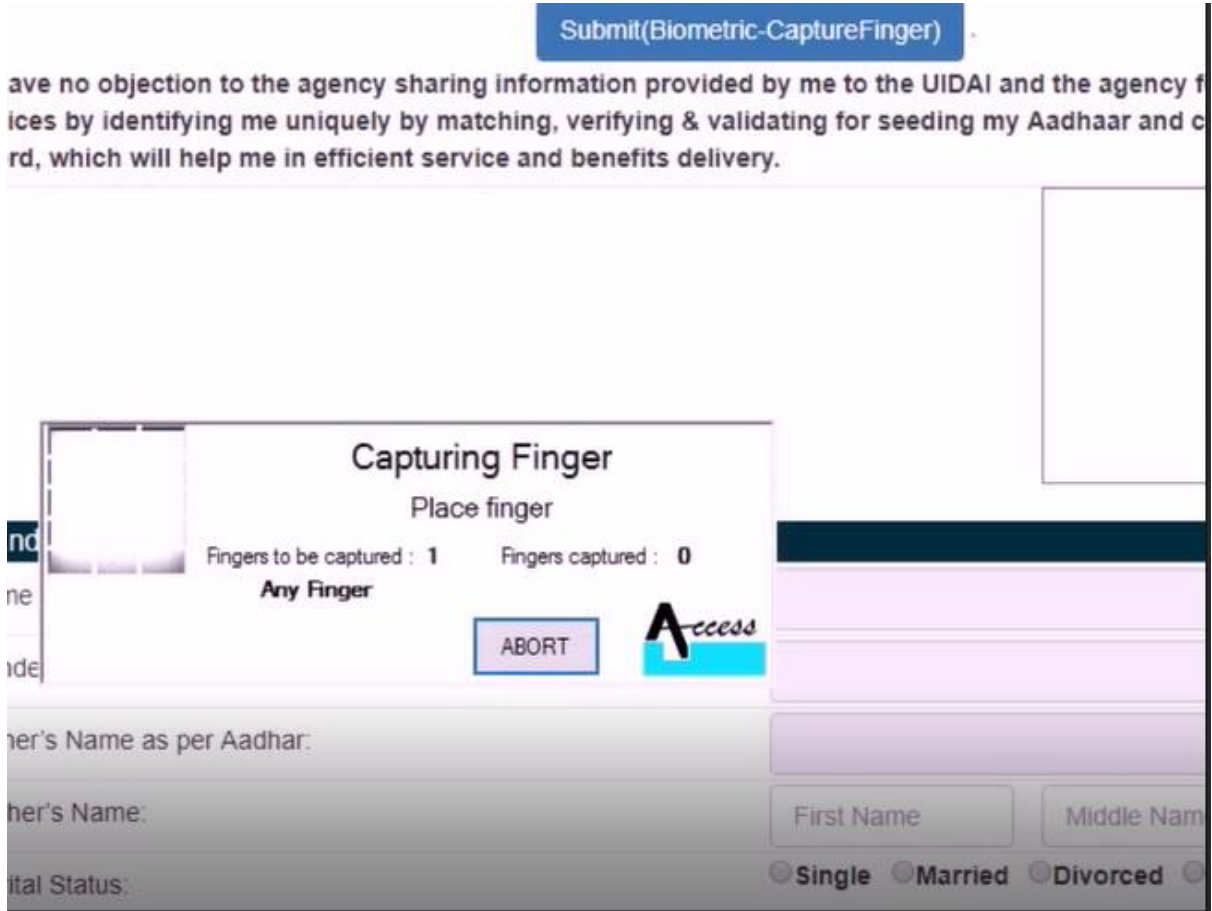

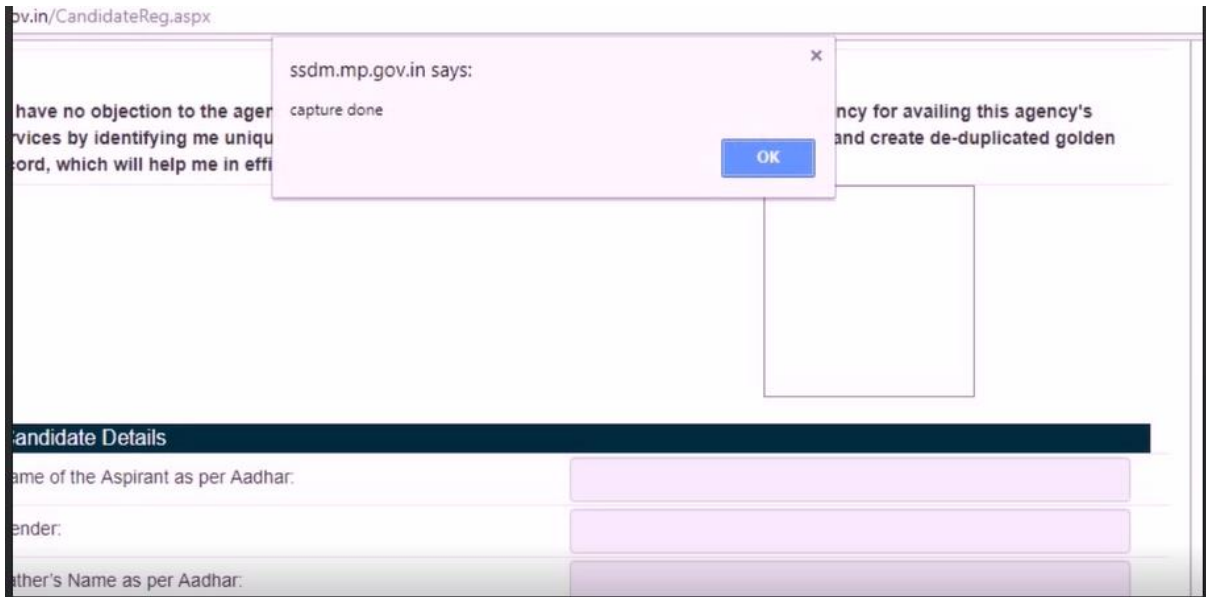

14. Once they click on the Ok button, fetch details from the Aadhar will be shown on the screen.

